

Frigbot Ultracella RS485 Adaptor

Installation instructions:


Step 1

Configure Ultracella for Modbus communications

Press and hold [PRGM]
Arrow up to set password = 22 [SET]
Arrow up to to select CNF [SET]
Arrow up to H7 = 1 [SET]
Arrow up to H10 = 4 [SET]
Arrow up to H11 = 2 [SET]
Arrow up to H12 = 0 [SET]
Now turn the POWER OFF


Step 2

Connect the WHITE wire to 54
Connect the GREEN wire to 53
on your Carel Ultracella

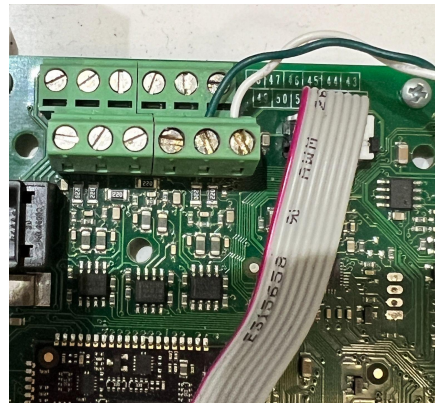

Step 3

Connect the BLUE Neutral wire to 1
Connect the BROWN active wire to 2
on your Carel Ultracella

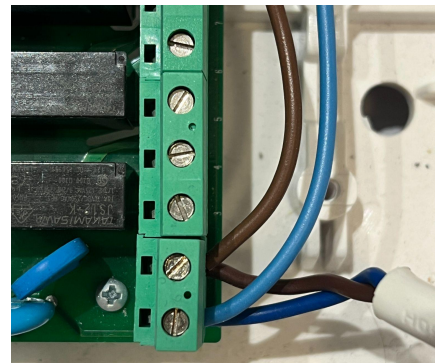

Step 4

Connect other end of smart cable to your Frigbot and turn POWER ON

